






# IGNITION FLYWHEEL INERTIA RING INSTRUCTIONS MR300i 0/K00.480.9161



- 1) Remove el skid plate y la gear lever .
- 2) Remove the ignition cover.

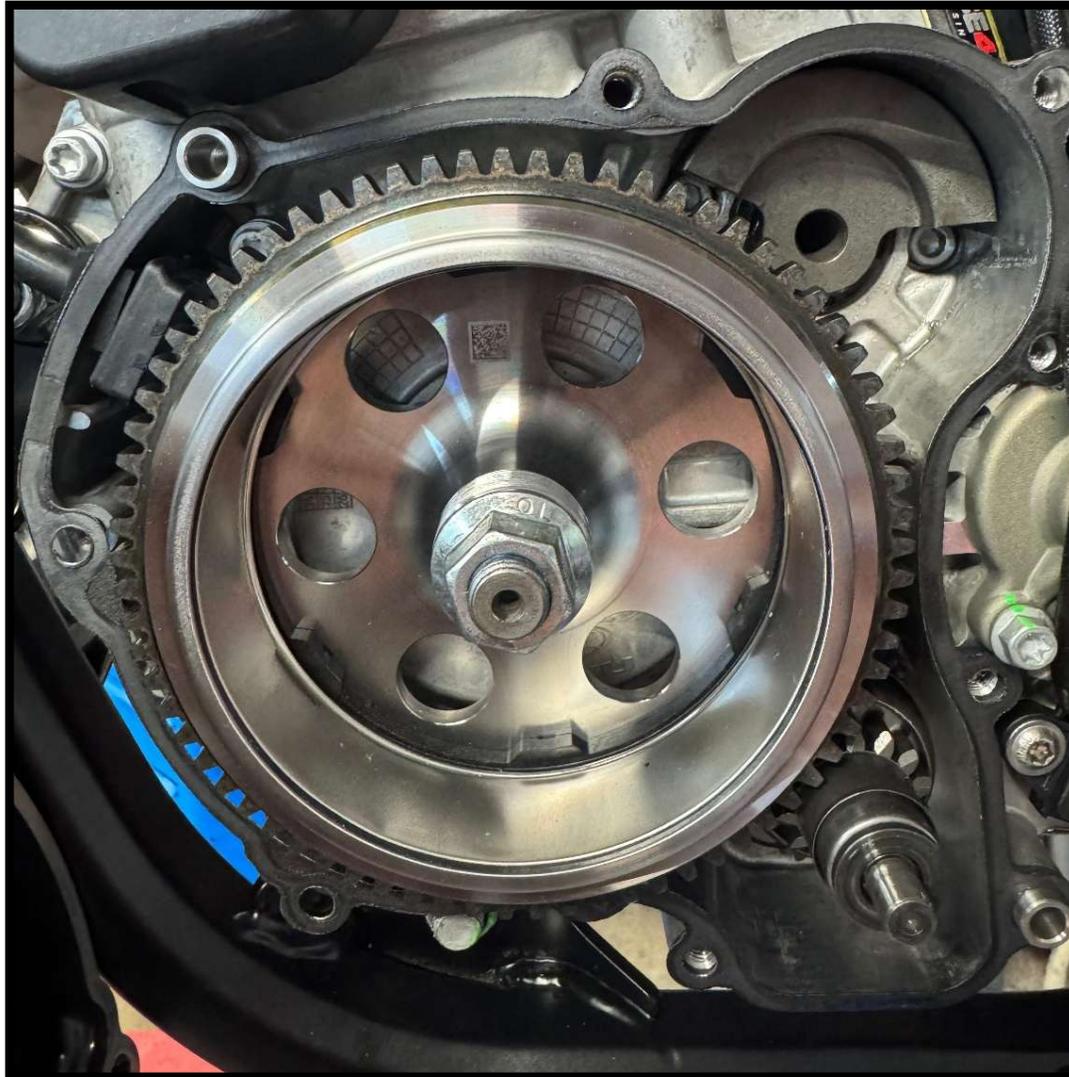

### 3) Remove the flywheel using the special tool. (Ref: 0/005.050.9101)

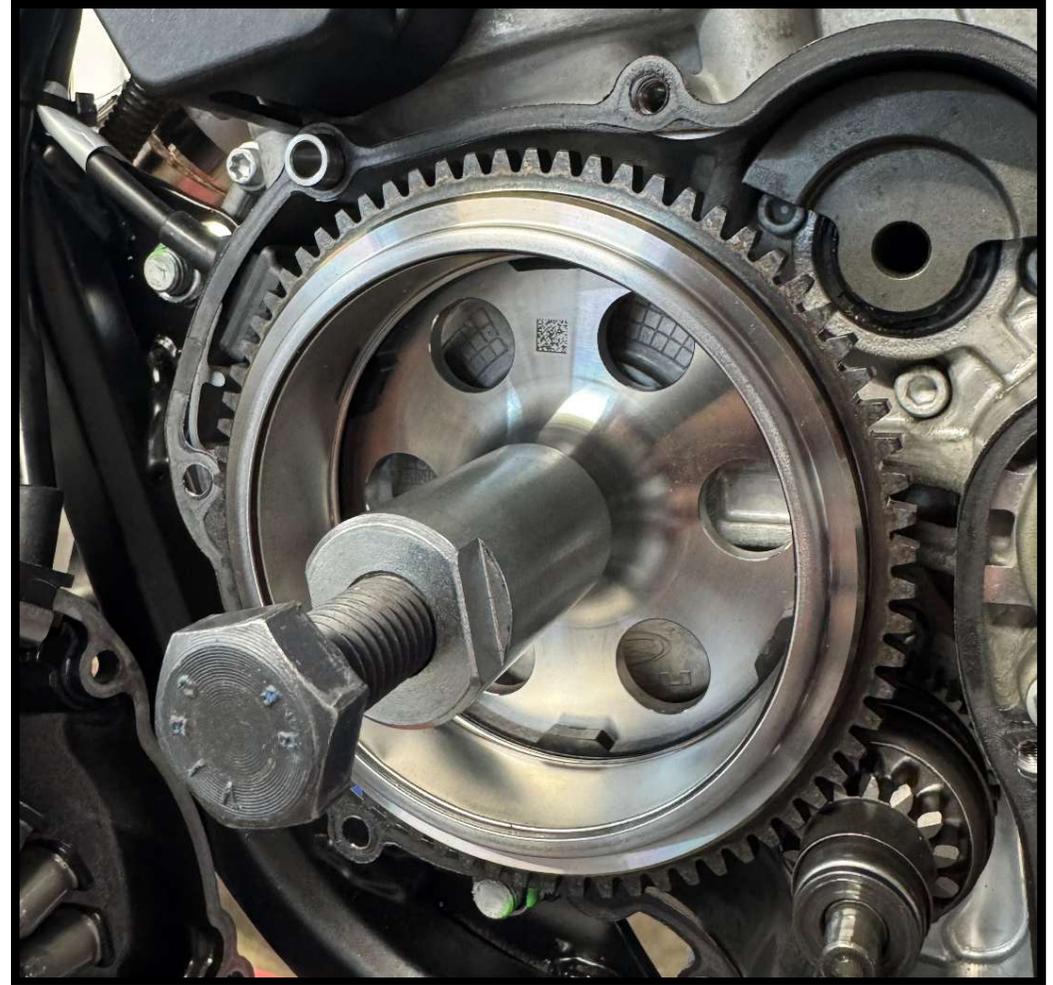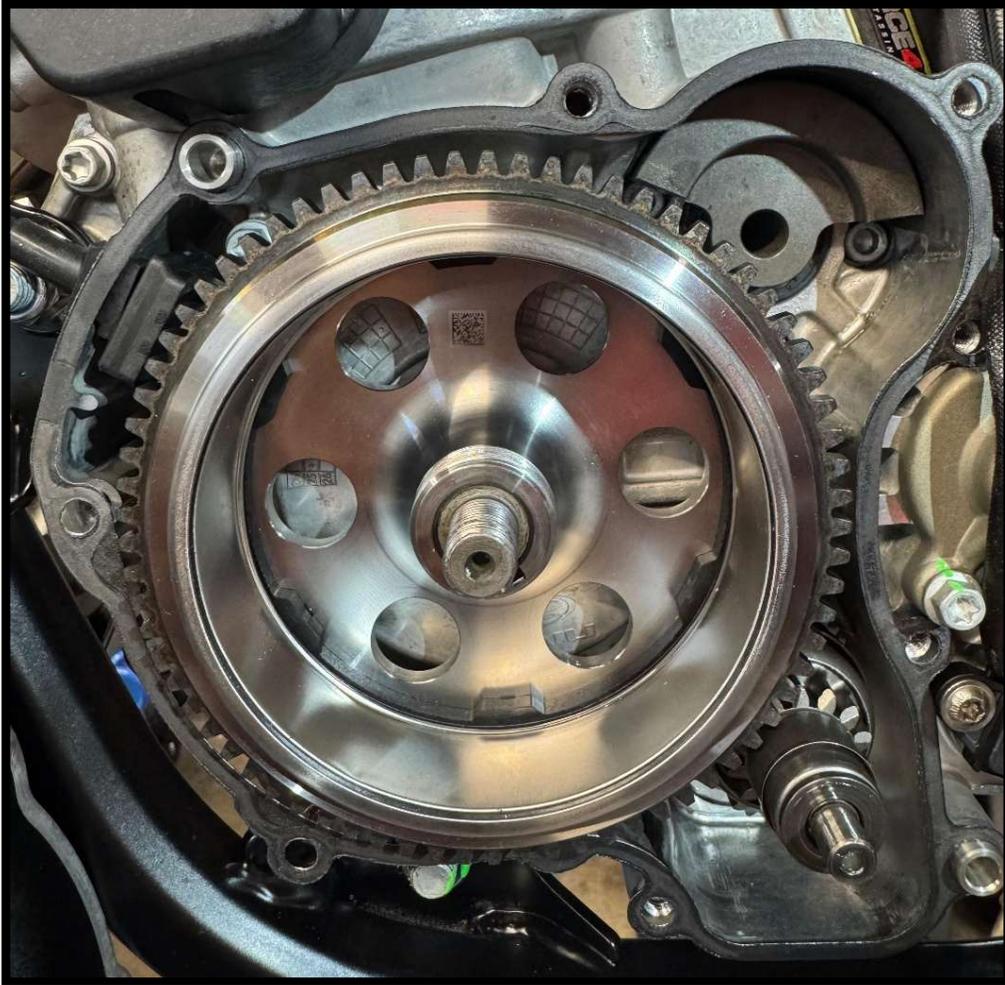


- 4) Position the ring on the flywheel to mark the four anchor points.
- 5) Make 1 mm deep marks using a 4.25 mm drill bit.




**6) Secure the ring with the four threaded studs.  
(IMPORTANT NOTE: Tighten to 6 Nm and use Loctite 243).**



**7) Place the flywheel on the crankshaft and tighten the nut to 60 Nm.**

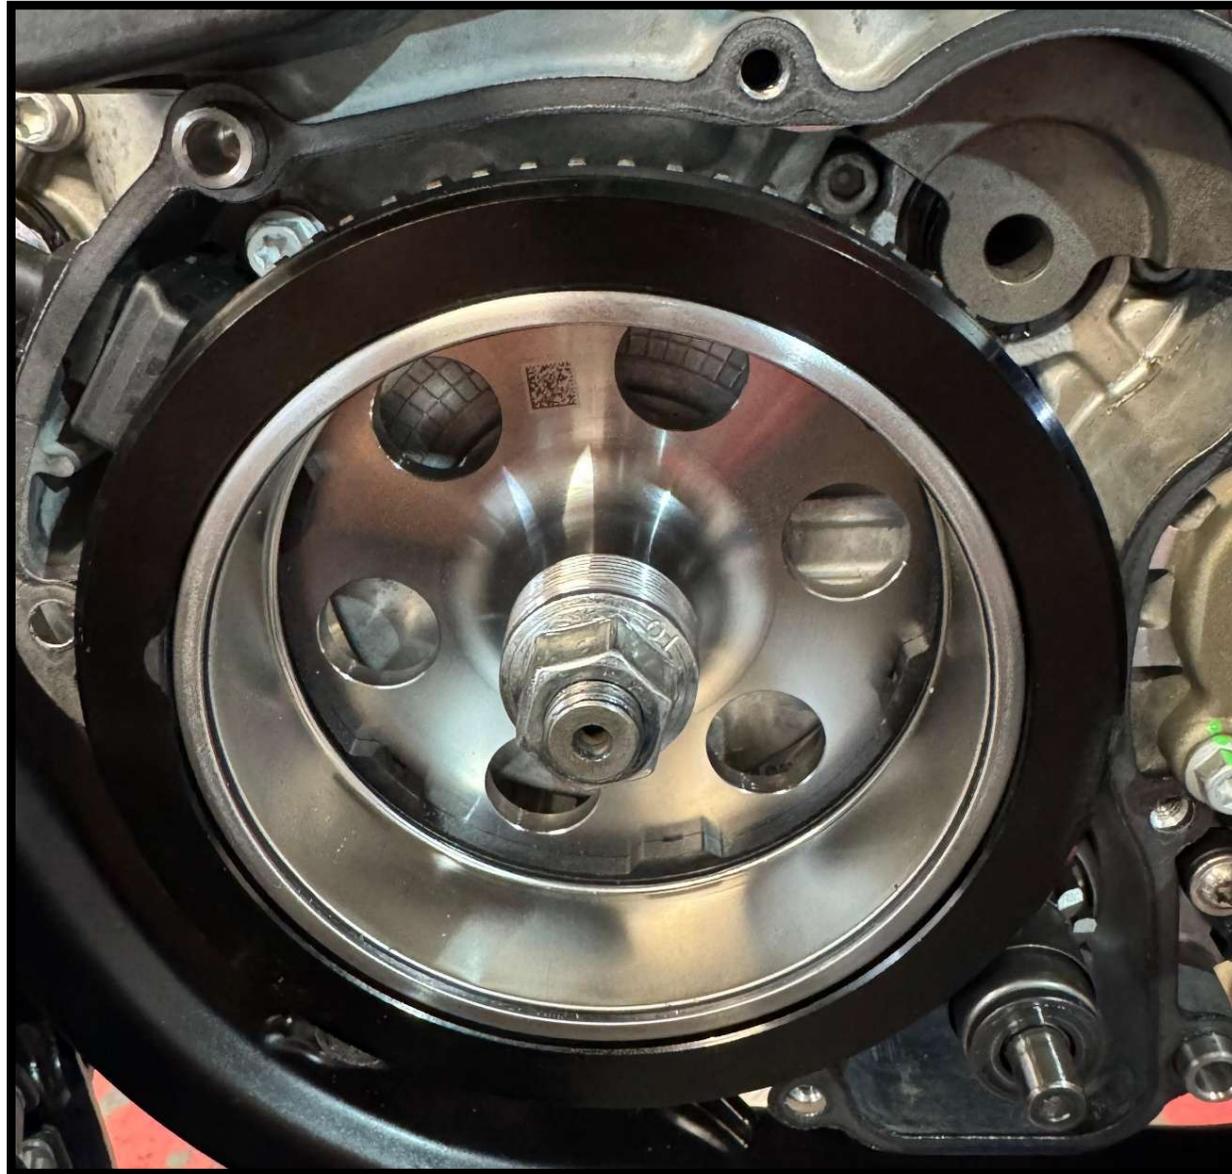

**8) Install the ignition cover and tighten the screws to 10 Nm.**

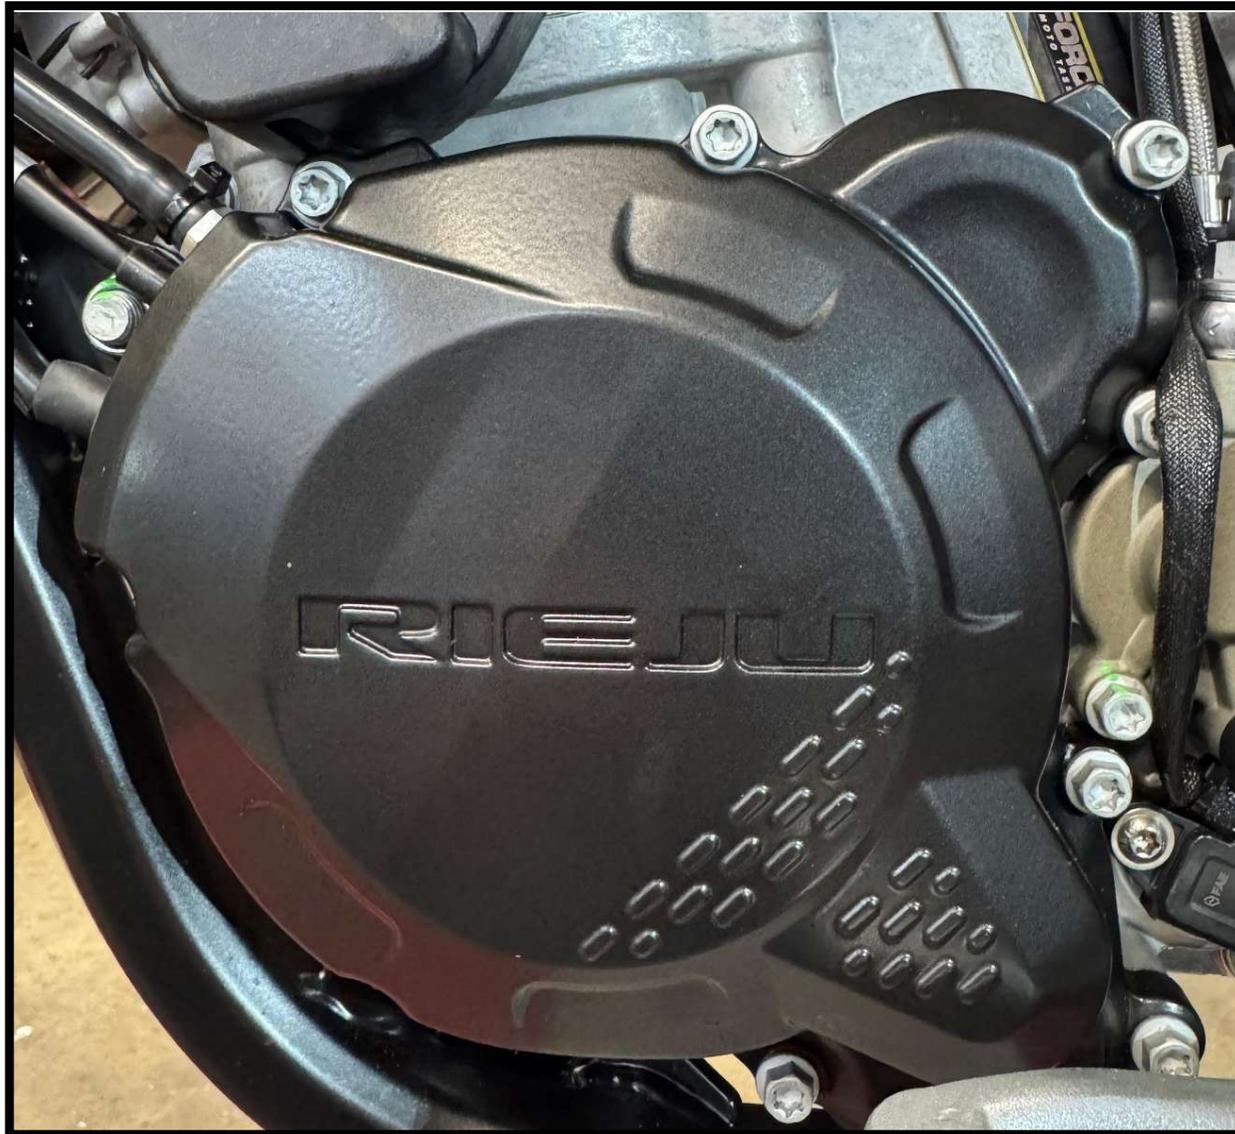

PROPRIETARY INFO: The documents and the information contained herein are proprietary and are not to be reproduced, used and disclosed to others for manufacture or for any other purpose except as specifically authorized.

